



Figure 1

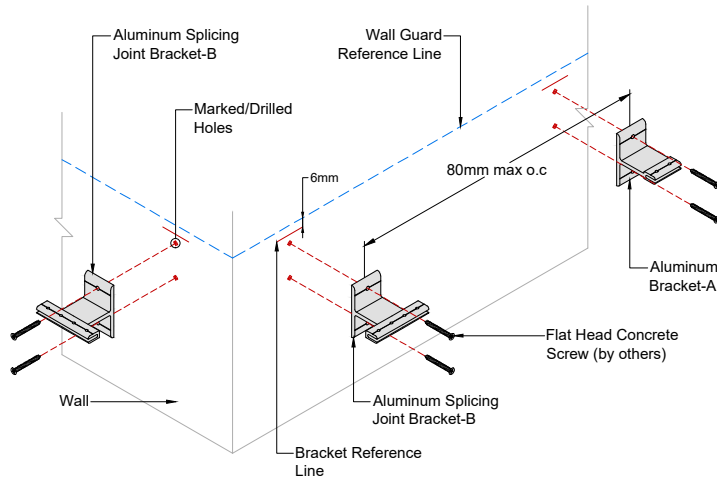


1. Layout the wall guard to determine the required height. Deduct 6mm and mark a reference line on the wall at a maximum spacing of 800 mm o.c.
2. Position the top edge of the bracket against the wall along the bracket reference line, then mark the locations of the pre-drilled holes on the wall.
3. Drill the marked holes using a 5mm drill bit for concrete screws (concrete wall installation) or 16mm drill bit for toggle bolts (drywall installation).

Figure 2

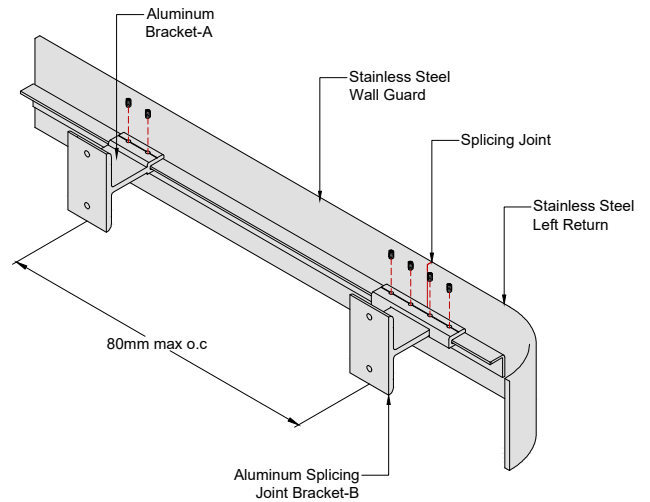


4. When determining bracket locations, splicing bracket-B must be installed at each splice location. Brackets are required to start at each return and shall be spaced at a maximum of 800 mm o.c.

Figure 3

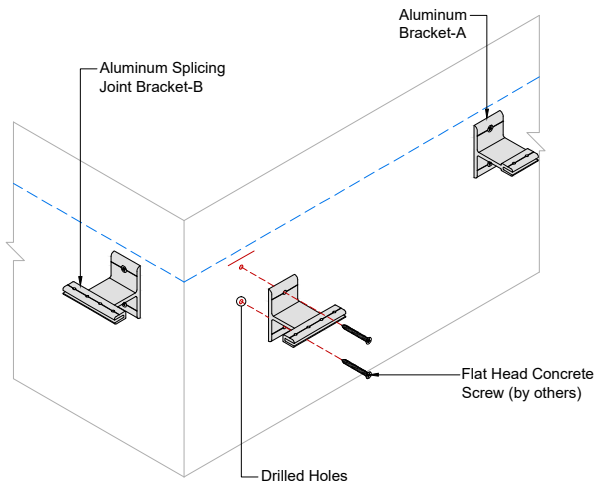


5. Install and align the brackets with the drilled holes on the wall, then tighten the screws to secure them in place.

Figure 4

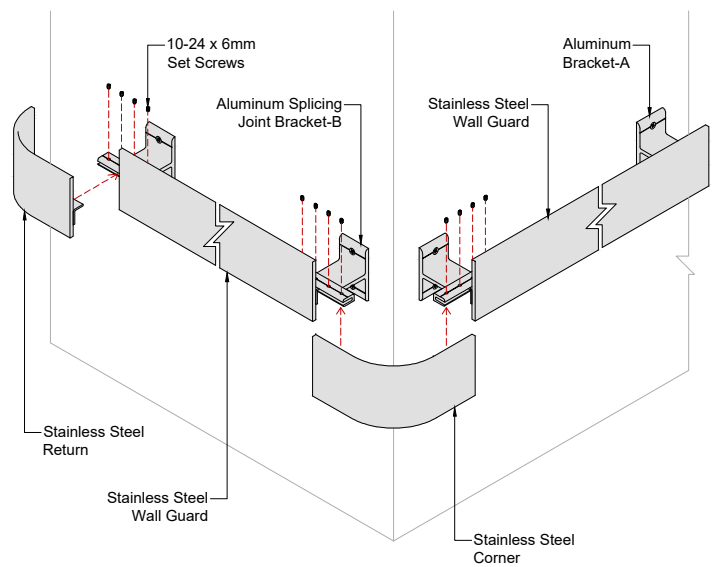

6. Position the wall guard, returns, and corners onto the mounting brackets. Secure the wall guard to the brackets by tightening the set screws.

Figure 5

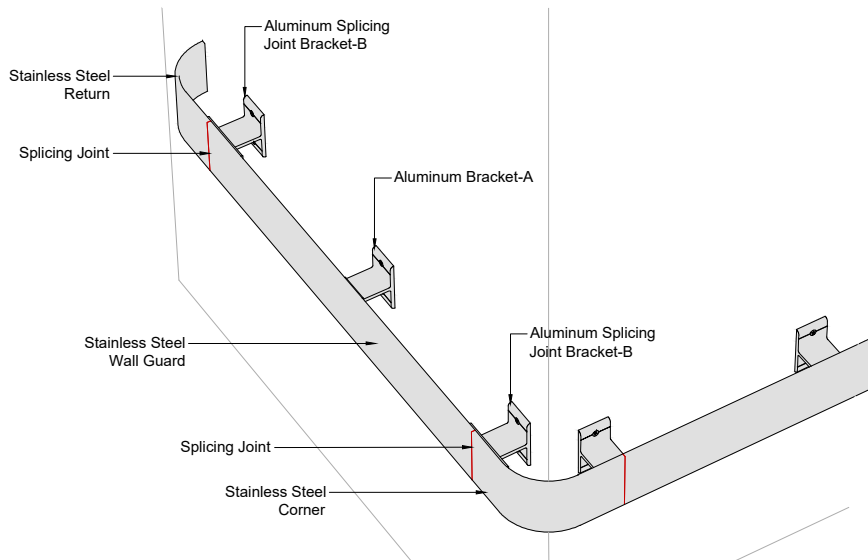

7. Clean the exposed surfaces with a non-solvent cleaner as required.

